


## Engine

### INSPECTION

**HINT:** Inspect these items when the engine is cold.

1. INSPECT [DRIVE BELT](#)
2. REPLACE SPARK PLUGS

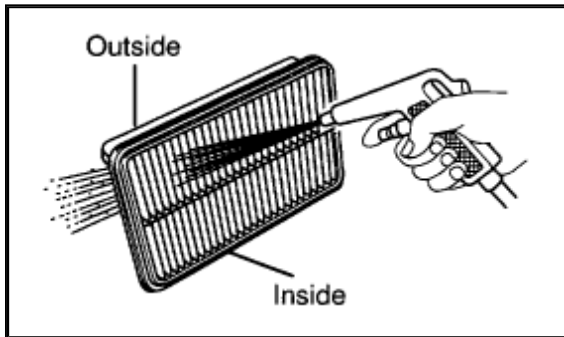

ZOOM

SIZED FOR PRINT

3. INSPECT AIR FILTER
  - a. Visually check that the air filter is not excessively dirty or oily.

**HINT:** Oiliness may indicate a stuck PCV valve. If necessary, replace the air cleaner element.
  - b. Clean the air filter with compressed air. First blow from the inside thoroughly, then blow off the outside of the element.
4. REPLACE AIR FILTER  
Replace the air filter with a new one.
5. REPLACE ENGINE OIL AND [OIL FILTER](#)
6. REPLACE ENGINE COOLANT
7. REPLACE GASKET IN FUEL TANK CAP
8. INSPECT FUEL LINES AND CONNECTIONS
9. INSPECT EXHAUST PIPES AND MOUNTINGS
10. ADJUST [VALVE CLEARANCE](#)