


ZOOM

SIZED FOR PRINT

REMOVAL


1. REMOVE REAR [WHEEL](#) Torque: **103 Nm (1,050 kgf.cm, 76 ft. lbs.)**
2. REMOVE ABS SPEED SENSOR WIRE HARNESS CLAMP Remove the bolt and disconnect the ABS speed sensor wire harness clamp. Torque: **19 Nm (194 kgf.cm, 14 ft. lbs.)**
3. REMOVE TAILPIPE Remove the 2 bolts, springs, gasket, 3 O-rings and tailpipe. Torque: **43 Nm (440 kgf.cm, 32 ft. lbs.)**

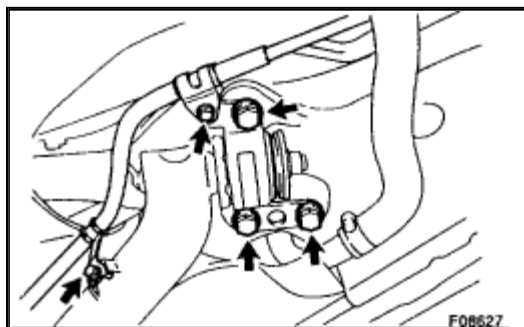

ZOOM

SIZED FOR PRINT


4. DISCONNECT PARKING BRAKE CABLE CLAMP Remove the 2 bolts and disconnect the parking brake cable clamps.
Torque: **5.4 Nm (55 kgf.cm, 48 inch lbs.)**
5. LOOSEN 3 BOLTS ON FRONT SIDE OF LOWER SUSPENSION ARM Torque: **65 Nm (663 kgf.cm, 48 ft. lbs.)** **HINT:** Do not remove the bolts. At the time of installation, after stabilizing the [suspension](#), torque the bolts.

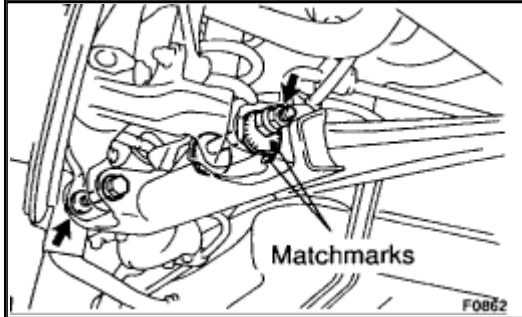

ZOOM

SIZED FOR PRINT

6. DISCONNECT REAR AXLE CARRIER FROM LOWER SUSPENSION ARM
 - a. Remove the front side bolt and nut. Torque: **74 Nm (755 kgf.cm, 55 ft. lbs.)** **HINT:** At the time of installation, after stabilizing the [suspension](#), torque the nut.
 - b. Place matchmarks on both the cam plate and lower suspension arm.
 - c. Remove the nut, cam plate and cam bolt. Torque: **74 Nm (755 kgf.cm, 55 ft. lbs.)** **HINT:** At the time of installation, after stabilizing the [suspension](#), torque the nut.
 - d. Disconnect the rear axle carrier from the lower suspension arm.
7. DISCONNECT REAR [SHOCK ABSORBER](#) Remove the bolt and nut and disconnect the rear [shock absorber](#). Torque: **140 Nm (1,428 kgf.cm, 103 ft. lbs.)** **NOTICE:** Do not turn the nut. **HINT:** At the time of installation, after stabilizing the [suspension](#), torque the bolt.
8. REMOVE LOWER SUSPENSION ARM
 - a. Remove the bolt and nut on the rear side of lower suspension arm. Torque: **74 Nm (755 kgf.cm, 55 ft. lbs.)** **HINT:** At the time of installation, after stabilizing the [suspension](#), torque the nut.
 - b. Remove the front side 3 bolts and lower suspension arm.

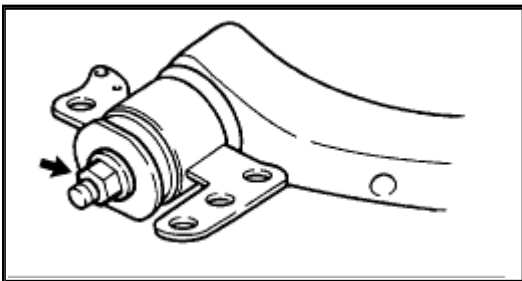

ZOOM

SIZED FOR PRINT

9. REMOVE SUSPENSION ARM BRACKET Remove the nut, suspension arm bracket and stopper. Torque: **110 Nm (1,122 kgf.cm, 81 ft. lbs.)** **HINT:** At the time of installation, after stabilizing the [suspension](#), torque the nut.

INSTALLATION

Installation is in the reverse order of removal.

HINT: After installation, check the rear [wheel](#) alignment.